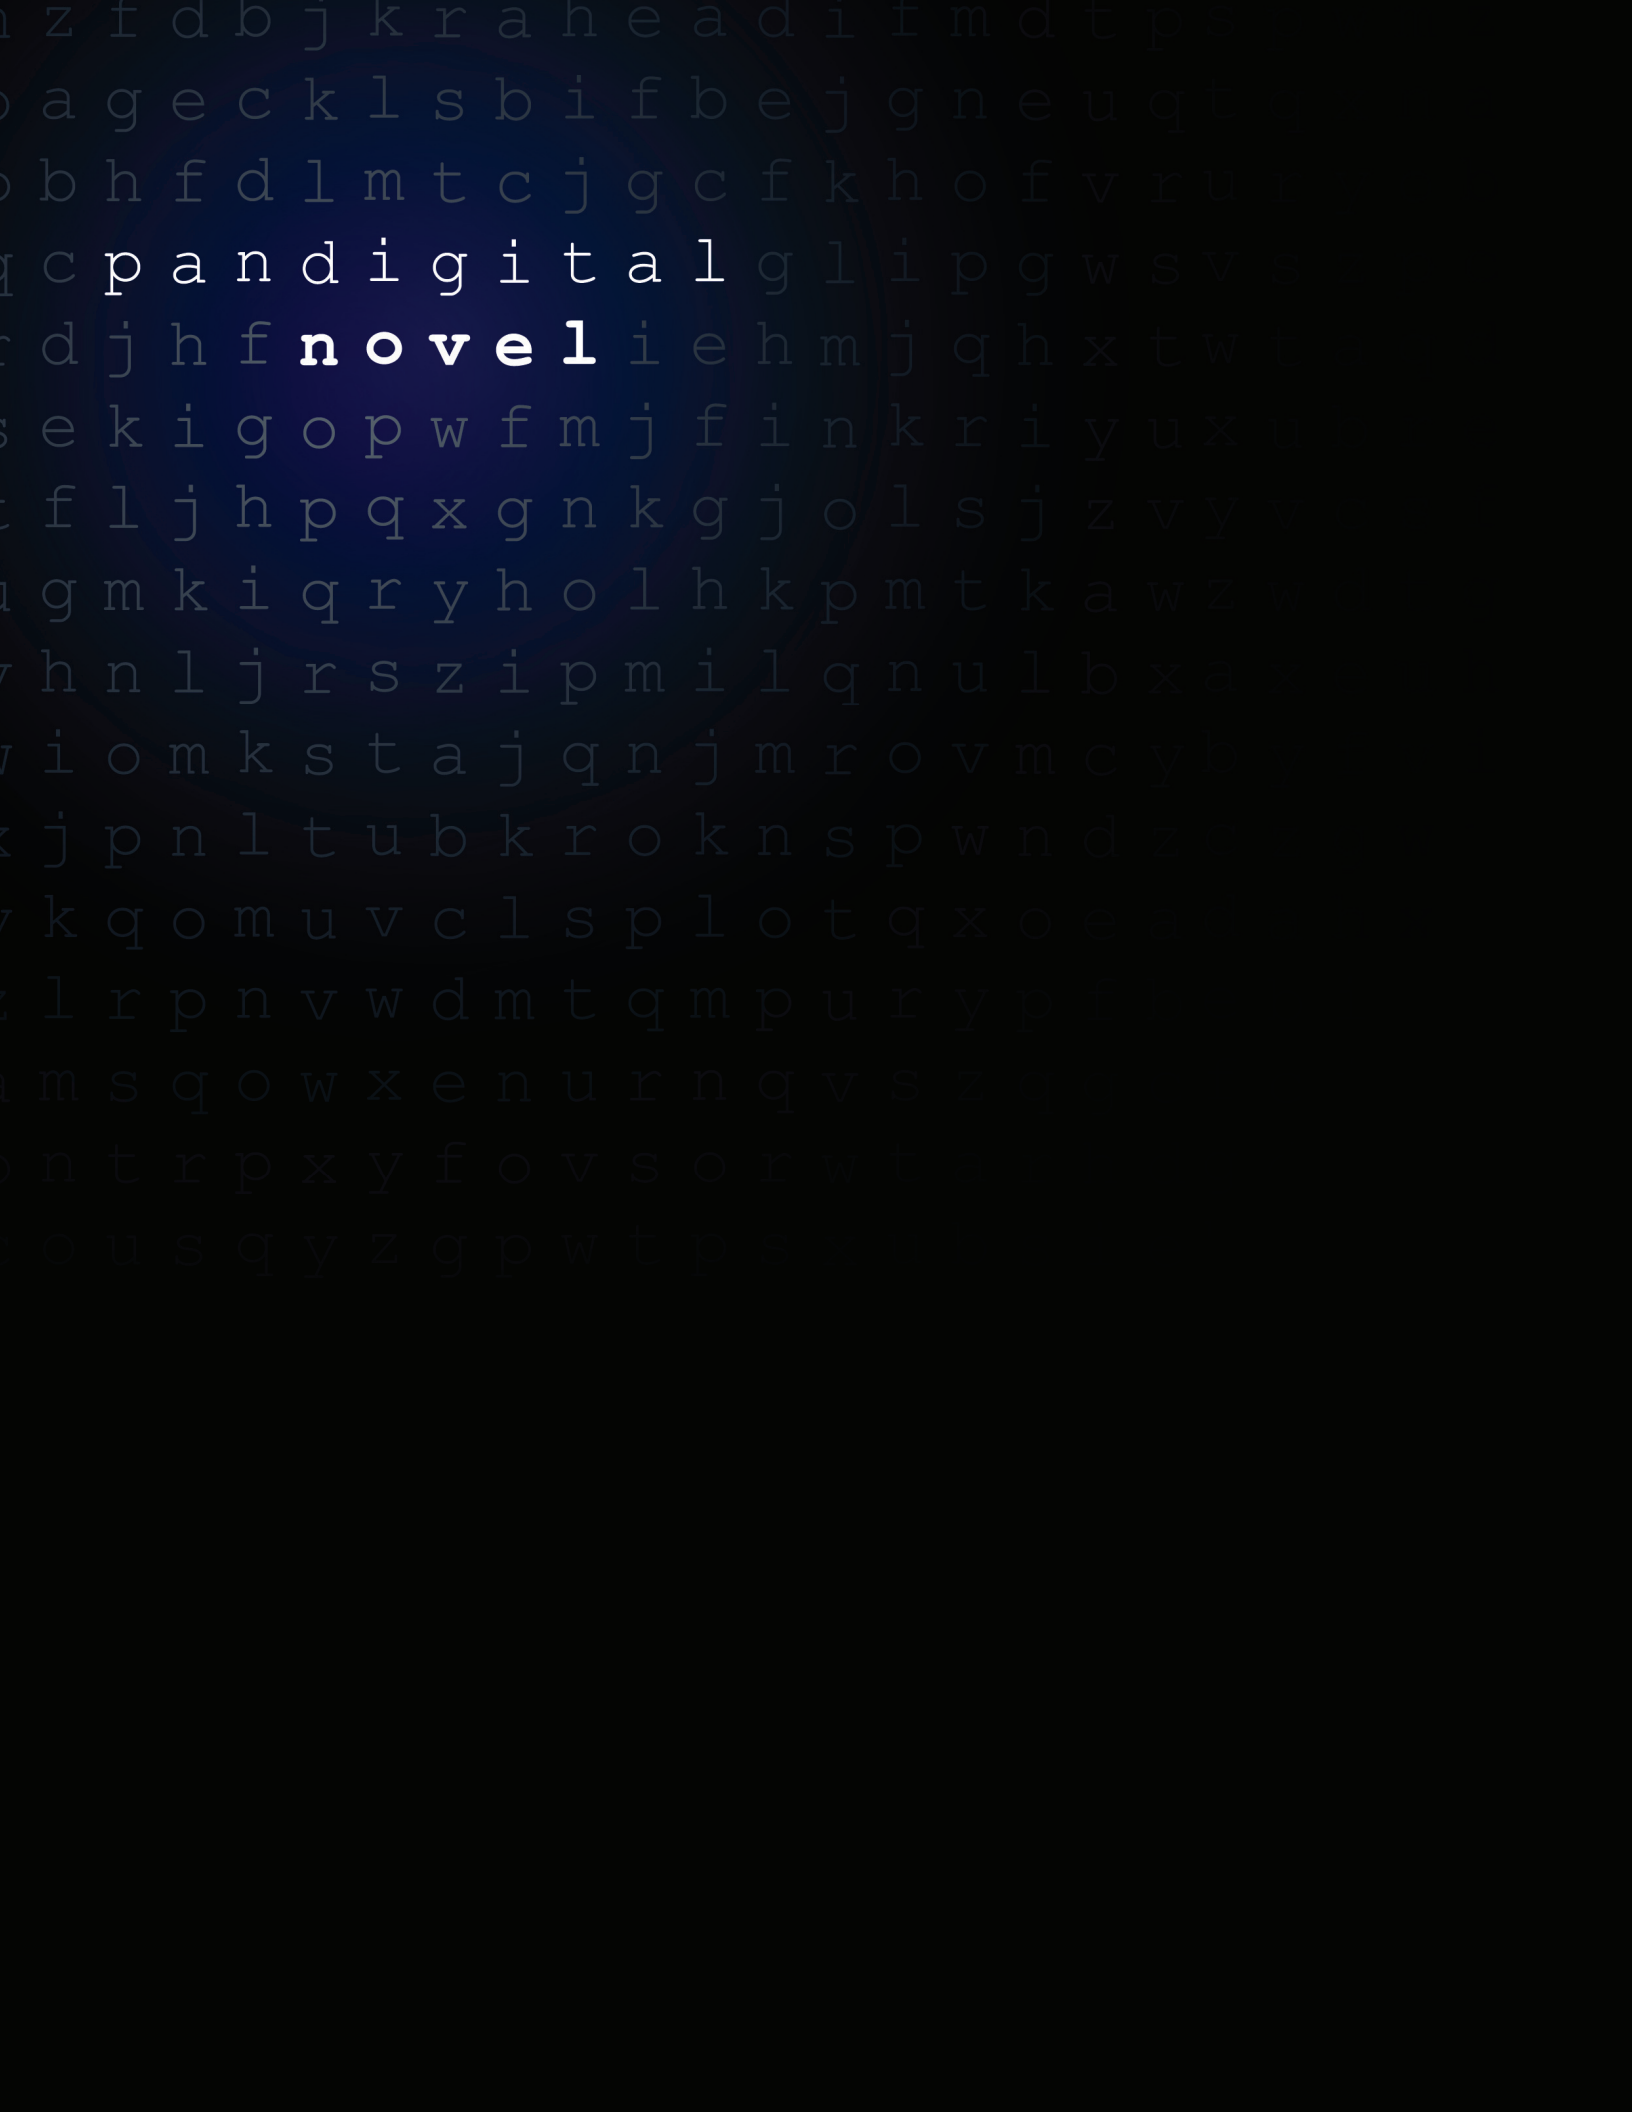
pandigital
novel

PANDIGITAL
Bookstore
My Library
Home
Reader
My Library
Web
Music
Videos
Photos
Email
Shop B&N
Alarm
Calendar
Search
Import SD
Settings

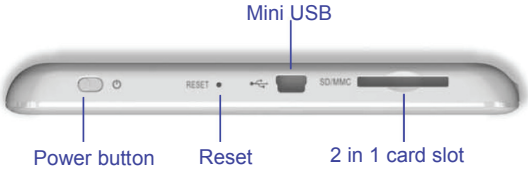
Mini USB
RESET
SD/MMC
Power button
Reset
2 in 1 card slot

Light sensor
Volume button
DC jack
7.5”
5.6”
4.2”
5.6”
Earphone jack
Speaker holes

Getting Started

❖ ***NOTE:*** *If you tap an application icon or function button multiple times without waiting for the process to finish, a message may appear stating the application is busy now. Select* **Force close** *to stop the process, or select* **Wait** *to allow the process to finish.*

1 Charge your Device

Plug the power adapter into an electrical wall outlet, and then connect to your device to fully charge the battery before use *(approx. 4 hours)*.

❖ *The battery does not charge via the USB cable.*

While charging, the battery icon displays as: .
When fully charged, the battery icon displays as: .

❖ *You can use the device while the battery is charging.*

2 Turn Device On

Slide the power button and release to turn on. Wait until the **HOME** screen is displayed.

3 Set Date & Time

IMPORTANT - In order to connect with your Barnes & Noble online account, the Date and Time must be set correctly according to your location.

❶ Select **Settings** from the Application Quick Launch Bar.

❷ Tap in the **Time Zone** field to select the time zone for your location. If necessary, tap in the **Date** and **Time** fields to change the date and time.

❸ Select your desired time format:
12HR = 12:00am-12:00pm *(default)*
24HR = 12:00-24:00

❹ Tap **Save**.

4 Set up Wi-Fi Network

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

❶ Select **Settings** from the Application Quick Launch Bar, → tap **Network**.

❷ Turn Wi-Fi on by tapping the **Wi-Fi is off/Turn on Wi-Fi**.

❸ The device automatically scans and list all local Wi-Fi Networks found.

❹ A indicates secure networks that require login name/password to connect.

❺ Tap the desired network to which you want to connect, → enter the **Network Password** if applicable.

❻ Tap to close the **Settings** screen.

❖ *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap* **Other** *and then enter the network name and key, → tap* ***Save****.*

❖ *(Advanced): After saving the Wi-Fi network, you can change your network settings by selecting* **Manual Setup***, and then follow the prompts.*

❖ *The Wi-Fi icon on the top of screens indicates the status as follows:*
= Connected *= Not connected, Wi-Fi turned ON*
= Not connected and Wi-Fi turned OFF (power saver)

❖ *When the device goes into sleep mode, the Wi-Fi disconnects from the local network, but will automatically reconnect when out of sleep mode (may take up to 30 seconds to reconnect).*

Connecting to Public Wi-Fi Hotspot

If you are connecting via a public Wi-Fi hotspot, it may be necessary to immediately launch the browser and provide the hotspot login information prior to having an active internet connection.

❶ Follow steps 1-6 above to select the hotspot Wi-Fi network.

❷ Select **Web** from the Application Quick Launch Bar.

❸ Enter the login information as required by the hotspot.

HOME Screen

❶ Wi-Fi connection status
Battery charge level
Alarms have been set
Current Date & Time

❷ **Bookstore** row: Tap **Update** to populate media from Barnes & Noble *(scrollable horizontally)*. Tap on any media cover to display description, synopsis and **Buy** options.

❸ Tap **Bookstore** to launch web browser and go to Barnes & Noble's website.

❹ Indicates last B&N bookstore update.

❺ Sync with your Barnes & Noble account to get the newest issues of active subscriptions.
Date & Time must be set correctly to connect with your Barnes & Noble account.

❻ **My Library:**

Row 1 displays your recently viewed media *(non-scrollable)*.
Row 2 displays media in your device *(scrollable horizontally)*. The most recent downloaded media displays in the first position. If desired, tap **Title** to sort by media title, or **Author** to sort by author's first name.
Tap **My Library** for quick access to your **My Library** screen.

❼ Tap on media icons in **My Library** rows to open and display in the **Reader.**

❽ **Application Quick Launch Bar** *(scrollable horizontally)***.** Tap application icon to launch an application.

❾ Tap to hide the **Application Quick Launch Bar**. Finger slide upward *(using your fingernail)* from the bottom of the screen to re-open.

❖ *Dates on eMagazines and eNewspapers indicate publication issue date.*

Application Quick Launch Bar

Home	Displays the HOME screen
Reader	Displays your digital media for reading.
My Library	Stores digital media *(eBooks, eMagazines and eNewspapers)*.
Web	Access the Internet and 'surf the web' whenever desired.
Music	Play and manage audio files *(MP3, WAV, AAC, OGG)*
Videos	Play and manage video files *(MPEG4)*
Photos	View and manage photo files *(JPG, JPEG, BMP, PNG, non-animated GIF)*
Email	Send/Receive email using your existing email addresses.
Shop B&N	Shop the Barnes & Noble website.
Alarm	Use as alarm clock with scheduled alarms.
Calendar	Display monthly calendar and schedule events.
Search	Search for specific strings of text in media file names.
Stocks	Check the status of specific company's stock offerings.
Facebook	Quick access to the Facebook website.
Contacts	Create a list of personal contacts.
Weather	Check the weather forecasts of locations of your choice.
Games	Play pre-loaded games for entertainment.
Import SD	Import media files into the internal memory.
Settings	Multiple settings for personalizing and enhancing your device.
Adobe® eBooks	Read and manage eBooks copied from Adobe Digital Editions *(ADE)*
Dictionary	Quick access to the built-in dictionary.
Upgrade	Download firmware from our website to upgrade your device.

Overview of Buying & Downloading Books to Device

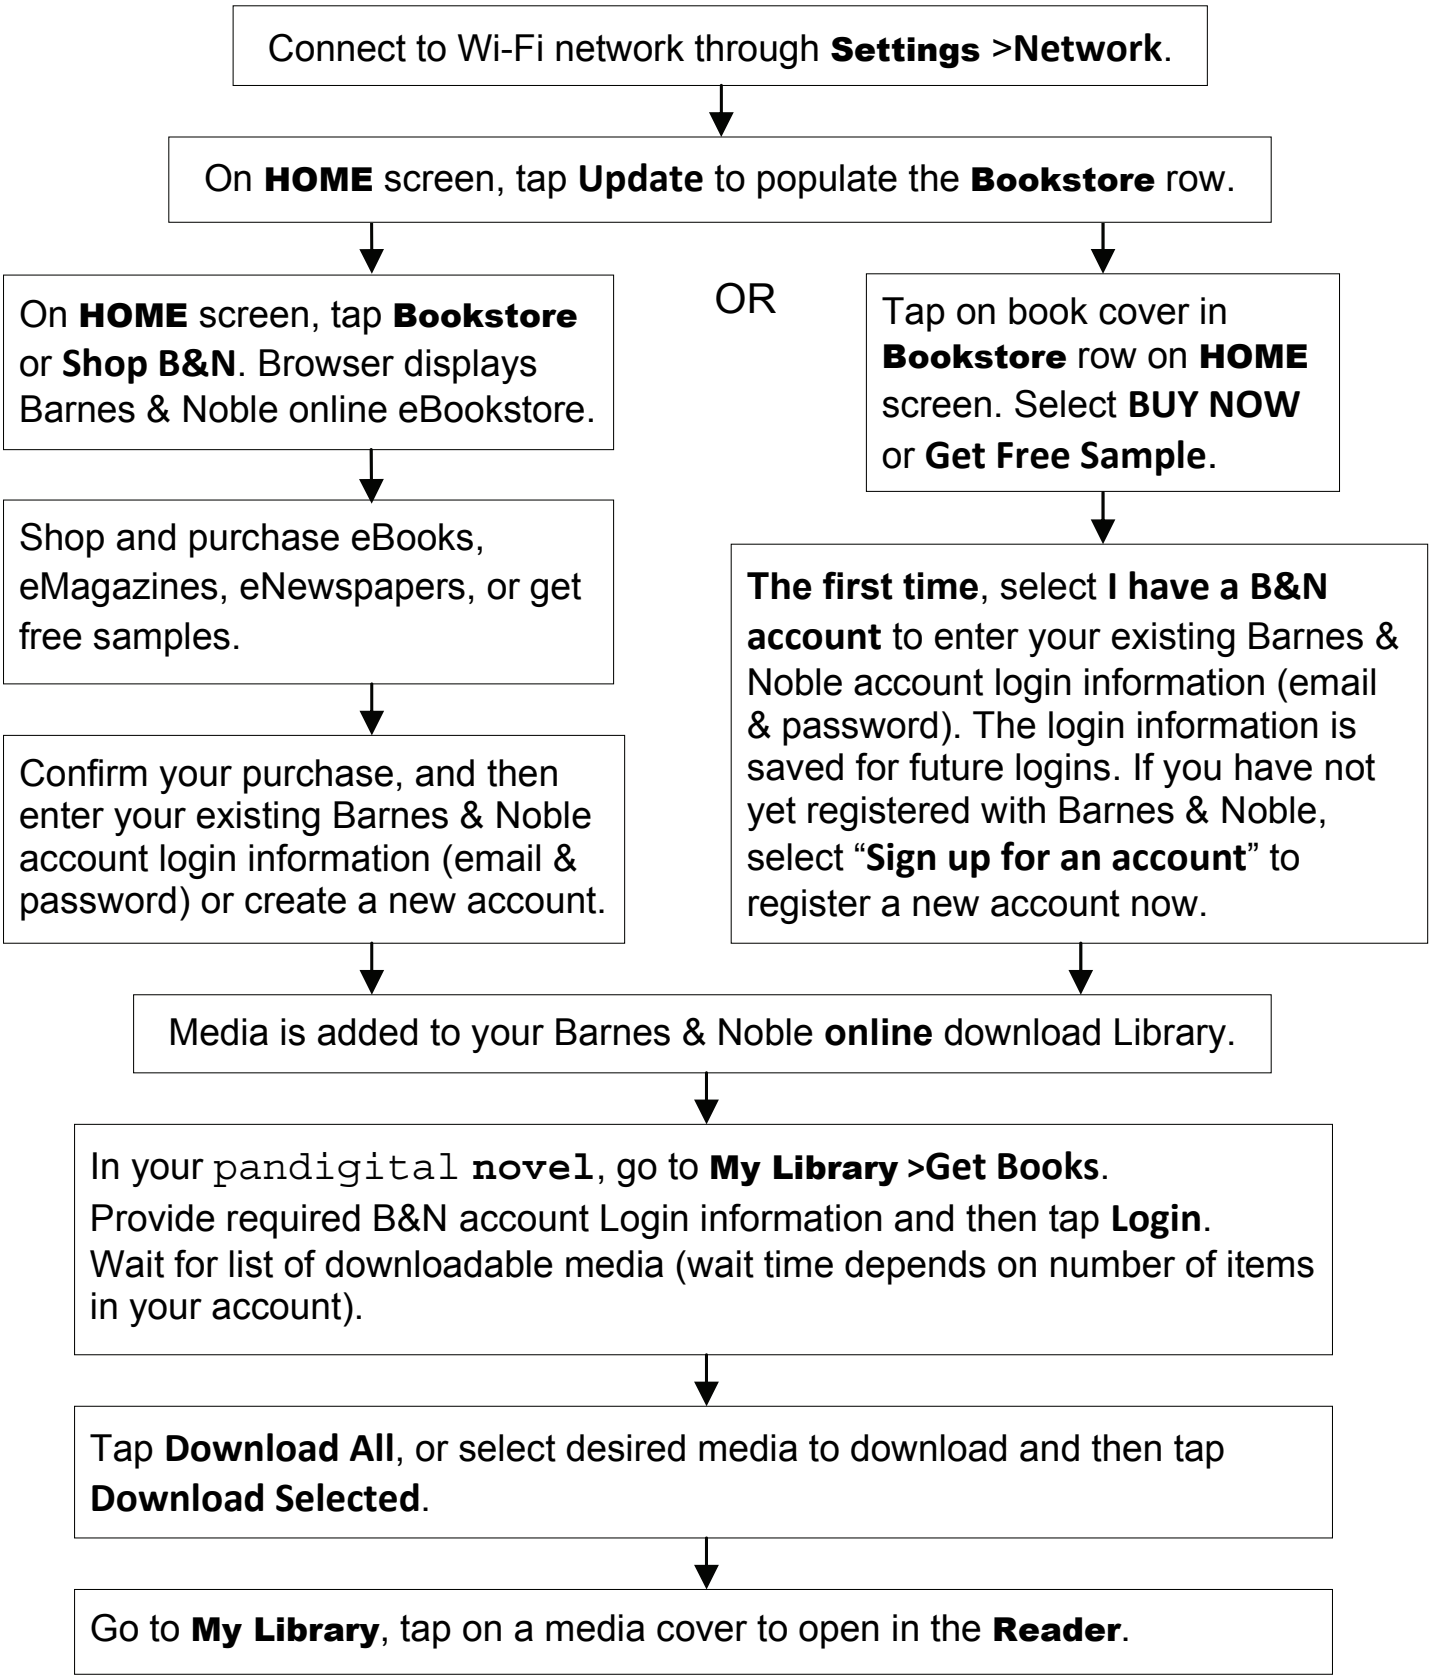
Connect to Wi-Fi network through **Settings** >**Network**.
On **HOME** screen, tap **Update** to populate the **Bookstore** row.
On **HOME** screen, tap **Bookstore** or **Shop B&N**. Browser displays Barnes & Noble online eBookstore.
OR
Tap on book cover in **Bookstore** row on **HOME** screen. Select **BUY NOW** or **Get Free Sample**.
Shop and purchase eBooks, eMagazines, eNewspapers, or get free samples.
The first time, select **I have a B&N account** to enter your existing Barnes & Noble account login information (email & password). The login information is saved for future logins. If you have not yet registered with Barnes & Noble, select "**Sign up for an account**" to register a new account now.
Confirm your purchase, and then enter your existing Barnes & Noble account login information (email & password) or create a new account.
Media is added to your Barnes & Noble **online** download Library.
In your pandigital **novel**, go to **My Library** >**Get Books**.
Provide required B&N account Login information and then tap **Login**.
Wait for list of downloadable media (wait time depends on number of items in your account).
Tap **Download All**, or select desired media to download and then tap **Download Selected**.
Go to **My Library**, tap on a media cover to open in the **Reader**.

My Library

Tap **My Library** on the **HOME** screen to display the **My Library** screen.

❶ Reader Function Menu

❷ Row 1 displays your recently viewed media *(non-scrollable)*.

❸ Rows 2-4 media stored in device *(scrollable).* The most recent downloaded media displays in the first position. To change sort order, tap **Title** or **Author** *(by first name)*.

❹ Sync with your Barnes & Noble account to get the newest issues of active subscriptions.
Date & Time must be set correctly to connect with Barnes & Noble account.

❺ Quick jump to other bookshelves.
(Use **Bookshelves** *function to create new bookshelves.)*

Finger slide upward from the bottom of the screen *(using your fingernail)* to display the **Application Quick Launch Bar**.
Tap anywhere on screen to close again.

- *Simply tap on any media cover to open and display it in the* **Reader**.
- *Dates on eMagazines and eNewspapers indicate publication issue date.*
- *To access* ***Adobe*** *books, use the* **Adobe® eBooks** *application from the* **Application Quick Launch Bar**.

Reader

The **Reader** application is for displaying your digital media *(eBooks, eMagazines, and eNewspapers)*.

Methods that can be used to launch the **Reader**:

- Tap on a media icon in the **Home** or any **Bookshelf** screen.
- Select **Reader** from the **Application Quick Launch Bar**; the last read media file opens.

Reader Function Menu appears at the top of the screen for 3 seconds and then auto hides.

Tap in the top of the screen to re-display it.

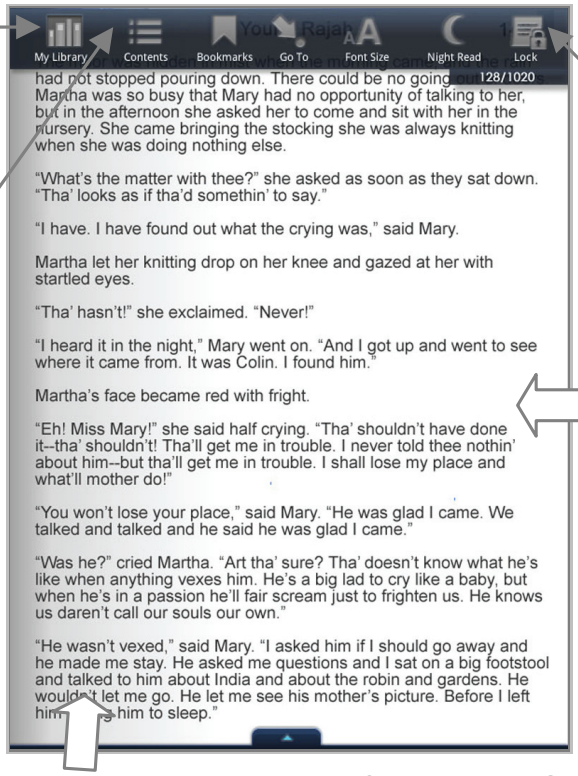
My Library
Contents
Bookmarks
Go To
Font Size
Night Read
Lock
128/1020
had not stopped pouring down. There could be no going
Martha was so busy that Mary had no opportunity of talking to her, but in the afternoon she asked her to come and sit with her in the nursery. She came bringing the stocking she was always knitting when she was doing nothing else.
"What's the matter with thee?" she asked as soon as they sat down. "Tha' looks as if tha'd somethin' to say."
"I have. I have found out what the crying was," said Mary.
Martha let her knitting drop on her knee and gazed at her with startled eyes.
"Tha' hasn't!" she exclaimed. "Never!"
"I heard it in the night," Mary went on. "And I got up and went to see where it came from. It was Colin. I found him."
Martha's face became red with fright.
"Eh! Miss Mary!" she said half crying. "Tha' shouldn't have done it--tha' shouldn't! Tha'll get me in trouble. I never told thee nothin' about him--but tha'll get me in trouble. I shall lose my place and what'll mother do!"
"You won't lose your place," said Mary. "He was glad I came. We talked and talked and he said he was glad I came."
"Was he?" cried Martha. "Art tha' sure? Tha' doesn't know what he's like when anything vexes him. He's a big lad to cry like a baby, but when he's in a passion he'll fair scream just to frighten us. He knows us daren't call our souls our own."
"He wasn't vexed," said Mary. "I asked him if I should go away and he made me stay. He asked me questions and I sat on a big footstool and talked to him about India and about the robin and gardens. He would not let me go. He let me see his mother's picture. Before I left him he sent him to sleep."

Tap corner to bookmark page *(when Function Menu is not displayed).*

Finger slide right-to-left for next page.

Finger slide upward *(using your finger nail)* from the bottom of the screen to display the **Application Quick Launch Bar**. Tap anywhere on screen to close again.

- *To **highlight** text, touch & hold until you hear the audible cue, and then slide your finger across the text you want to highlight, release and select **Highlight** from the Reader options window.*
- *To add a **Note** or access the **Dictionary**, touch & hold for the audible cue, release, and then select **Add Note** or **Dictionary** from the Reader options window.*
- *To turn **Sleep Mode On/Off**, slide & release the power button quickly. When in sleep mode, the Wi-Fi disconnects from the local network, but will automatically reconnect when out of sleep mode (may take up to 30 seconds to reconnect).*

User Guide

The full pandigital **novel** User Guide is included as a book in your **My Library** bookshelf. You can view it by tapping on the User Guide book cover.

Once open, you can use the standard **Reader** functions to search and navigate through the document in the same manner as your downloaded media files.

The User Guide is also posted on our website: www.pandigital.net/support. Click the **Downloads** tab on the **Support** page.

Customer Support

Before calling customer support, you may find the answers to your questions in the **Frequently Asked Questions** section in the User Guide.

For Customer Support, call 1-800-715-5354.

Register your pandigital novel

Register your FREE 1-year warranty at www.pandigital.net.*

Qualify to win a FREE digital photo frame!** *(valid in USA only)*

If you must mail your registration rather than register online, please send your name, address, phone number, model number, serial number, and when & where you purchased the device to: **Pandigital, P.O. Box 2969, Dublin, CA 94568-2969 USA**

* The online registration is for the purpose of user and product registration. Failure to register does not in any way diminish any of your standard warranty rights, as described in the documentation included with your product.

** For details, go to our website www.pandigital.net.

pandigital novel License Agreement & Terms of Use

By activating and using the pandigital **novel**, you hereby consent and agree to our License Agreement and Terms of Use as outlined in the User Guide. Please see the User Guide for more information *(eBook in* My Library *or online at www.pandigital.net)*.

Limited Warranty

The limited warranty set forth below is given by Pandigital with respect to the Pandigital Novel™ line of products (the "Device") purchased and used in the United States of America. Pandigital warrants this product as follows:

LABOR: For a period of one (1) year from the date of purchase, if this Device is found to be defective, Pandigital will repair or replace the Device, at its sole option, at no charge. After this one (1) year period, labor charges will be charged on a case by case basis. If your Device is repaired or replaced during the Warranty Period, it will be covered by this Limited Warranty for the remainder of the original Warranty Period or ninety (90) days from the date of shipment of the replaced Device, whichever is longer

PARTS: For a period of one (1) year from the date of purchase, if this Device is found to be defective, Pandigital will supply at no cost, new or rebuilt replacement parts, at its option, at no charge. After this one (1) year period, parts will be charged for on a case by case basis. Modifications not approved by the party responsible for compliance will void user's authority to operate the equipment. If your Device is repaired or replaced during the Warranty Period, it will be covered by this Limited Warranty for the remainder of the original Warranty Period or ninety (90) days from the date of shipment of the replaced Device, whichever is longer

This Limited Warranty does not cover damage or malfunctions caused by accident, disaster, misuse, abuse, negligence or other external causes; third-party products; Internet or telecommunications failures; commercial use; unauthorized opening, use, service, tampering, alteration, repair or modification; or inadequate packing or shipping procedures. This Limited Warranty also does not cover cosmetic damage or normal wear and tear. This Limited Warranty does not apply to Devices sold as used, refurbished or reconditioned. This Limited Warranty does not cover damage caused by third party applications such as viruses, malware or other software. This Limited Warranty will be void if the Serial Number on your Device has been removed, tampered with or defaced or if your Device has been opened or serviced without authorization, tampered with, altered or modified. This Limited Warranty applies to your Device only (i.e., the hardware), and not to the software within your device. Similarly, this Limited Warranty does not cover downloaded data or materials, or accessories and peripherals, except as expressly provided above. This warranty is valid only in the United States.

The Device must be accompanied by a copy of the original retail purchase receipt for the warranty to be valid. If no proof of purchase is attached, the warranty will not be honored and repair costs incurred will be the responsibility of the end user. This warranty is only valid with written documentation detailing the complaint attached to the outside or inside of the carton. This warranty does not provide protection for the loss of data, regardless of format or cause. Pandigital reserves the right to modify and change the design of this Device without prior notice, written or otherwise.

Limitations. TO THE EXTENT PERMITTED BY LAW, THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES, AND WE SPECIFICALLY DISCLAIM ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND AGAINST HIDDEN OR LATENT DEFECTS. IF WE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY AND TO REPAIR OR REPLACEMENT SERVICE.

SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG A STATUTORY OR IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. WE ARE NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY

OTHER LEGAL THEORY. IN SOME JURISDICTIONS THE FOREGOING LIMITATION DOES NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.

All content included on the Pandigital website as well as Pandigital Devices, including pre-loaded demonstration images, digital media, digital cookbooks, text, graphics, logos, designs, photographs, button icons, images, audio/video clips, digital downloads, data compilations, and software, are the property of Pandigital or its suppliers and is protected by United States and international copyright laws or other intellectual property laws and treaties. Said content shall not be reproduced or used without express written permission from Pandigital and its suppliers respectively.

Use of this product constitutes acceptance of these terms and conditions of warranty.

To obtain warranty service, refer to the Customer Support section at www.pandigital.net.

Technical support telephone number: 1-800-715-5354.

FCC Notices

FCC ID: TLZ-NU706

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT INFORMATION TO THE USER

WARNING: Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device is designed for hand-held operation only. The antenna(s) used for this transmitter must not be collocated or operating in conjunction with any other antenna or transmitter within a host device, except in accordance with FCC multi-transmitter product procedures.

Disclaimers

© 2010 Pandigital, Inc. or its affiliates. All rights reserved. Pandigital, the Pandigital logo, Pandigital Novel, are trademarks of Pandigital Inc. Barnes & Noble and the "BN" logo are registered trademarks of Barnesandnoble.com LLC. All rights reserved. Facebook and the "f" logo are registered trademarks of Facebook Inc. All rights reserved. Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Pandigital Novel contains Adobe® Reader® Mobile software under license from Adobe Systems Incorporated, Copyright © 1995-2009 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe Systems Incorporated.